



PDF provided by Conference Room AV

[AMX AXB-REL8 8 Channel Relay Controller for AxLink Bus](#)

### Overview

The AXB-REL8 (FG5774) controls closure-activated devices, acting as an eight-channel relay control port on the AxLink bus.



FIG. 1 AXB-REL8

### Specifications

Specifications	
Dimensions (HWD)	1.51" x 5.55" x 5.45" (3.84 cm x 14.10 cm x 13.84 cm)
Enclosure	Non-glare, high-impact black matte plastic
Power Consumption	<ul style="list-style-type: none"> <li>Baseline draw: 90 mA @ 12 VDC (min)</li> <li>With all 8 relays On: 170 mA @ 12 VDC (max)</li> </ul>
Weight	17.50 oz. (496.11 g)
Included Accessories	Metal tab strips included for external adjacent relay commencing.
Optional Accessories	AC-RK Accessory Rack Kit
Dimensions (HWD)	1.51" x 5.55" x 5.45" (3.84 cm x 14.10 cm x 13.84 cm)
Enclosure	Non-glare, high-impact black matte plastic
Front Panel Components	
AxLink Status indicator	AxLink LED (green and blinks to indicate AxLink communication activity and power): <ul style="list-style-type: none"> <li>Full-Off indicates no power is being received or the controller is not functioning properly.</li> <li>One blink per second indicates power is active and AxLink communication is functioning.</li> <li>Full-On indicates there is no AxLink control or activity, but power is On.</li> </ul>
Device DIP switch	An eight-position DIP switch is used to set the device number for the AXB-REL8.
Relay LEDs 1-8 (Red)	Illuminate when associated relay is closed. Relay LED's should match panel control function.
Rear Panel Components	
AxLink connector	Four-pin captive wire receives power and information via the AxLink bus and AxLink system controller.
Relay contacts	Eight (normally -open) isolated two-pin relay contacts 1 A @ 28 VAC or VDC: <ul style="list-style-type: none"> <li>Relays 1-4 can share a common if use jumper "A" pins with a tab strip</li> <li>Relays 5-8 use discrete commons (wire commons individually)</li> </ul>

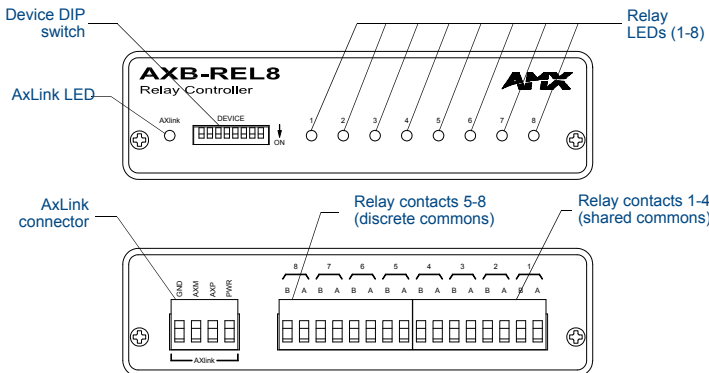


FIG. 2 AXB-REL8 front and rear views

### Installation

#### Setting the DEVICE DIP Switch

**Note:** Use the DIPSwitch 2.0 application available for free download from AMX to quickly figure out DIP Switch settings for all types of DIP Switches.

Set the device number on DEVICE DIP switch, located on the front of the AXB-REL8. The device can be 1 of the 255 devices in an Access control system. The device number must match the device assignment in the Access program. Device numbers are assigned into the following three segments:

- **Cards** 1 through 95
- **Boxes** 96 through 127
- **Panels** 128 through 255

Set the device number by setting the device DIP switches. The device number is the total of all of the switches in the ON position, and take effect by cycling the power.

DEVICE DIP Switch Settings								
Position	1	2	3	4	5	6	7	8
Value	1	2	4	8	16	32	64	128

#### Wiring

##### Preparing and Connecting Captive Wires

1. Strip 0.25 inch of wire insulation off all wires.
2. Insert each wire into the appropriate opening on the connector according to the wiring diagrams and connector types described in this section.
3. Tighten the screws to secure the wires. Do not tighten the screws excessively; doing so may strip the threads and damage the connector.

##### Wiring Guidelines

The interface requires a 12 VDC power to operate properly. The interface uses a PSN2.8 power supply. The Central Controller supplies power via the AxLink cable or external 12 VDC power supply.

The maximum wiring distance between the Central Controller and interface is determined by power consumption, supplied voltage, and the wire gauge used for the cable.

The table below lists wire sizes and maximum lengths allowable between the REL8 and Central Controller. The maximum wiring lengths for using

AxLink power are based on a minimum of 13.5 volts available at the Central Controller's power supply.

Wiring Guidelines at 170 mA	
Wire Size	Maximum Wiring Length
18 AWG	690.42 feet (210.43 m)
20 AWG	436.80 feet (133.13 m)
22 AWG	272.33 feet (83.00 m)
24 AWG	171.66 feet (52.32 m)

#### AxLink Data and Power Connections

Connect the control system's AxLink connector to the AxLink connector on the rear panel of the AXB-REL8 for data and 12 VDC power as shown in FIG. 3.

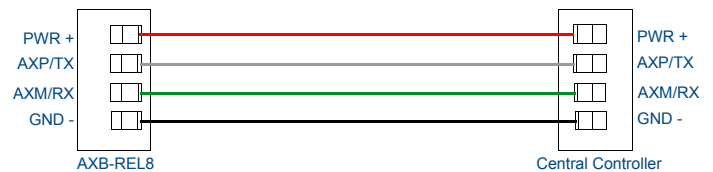


FIG. 3 AxLink wiring

#### Wiring AxLink With Optional 12 VDC Power Supply

Connect the control system's AxLink connector to the AxLink connector on the rear panel of the AXB-REL8 as shown in FIG. 4.

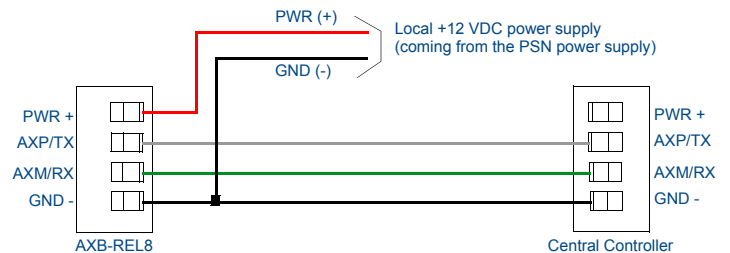


FIG. 4 Wiring AxLink with Optional 12 VDC power supply

Use a 12 VDC power supply when the distance between the control system and AXB-REL8 exceeds the limits described in the Wiring Guidelines at 170 mA table, or the power supply current capacity cannot accommodate the 170 ma (max) draw of the AXB-REL8.

- Make sure to connect the GND and +12 VDC wire on the AXB-REL8 AxLink connector end.
- Do not connect the optional +12 VDC power supply wire to the control system's power supply side of the AxLink connector (FIG. 4).

## Checking The Installation

After set-up is complete:

1. Check continuity of relay wiring.
2. Check cable numbers and wiring, interfaces and sources against supplied documentation.
3. Install tab strips to jumper between shared commons and clip off excess tabs.
4. Insert relay wiring terminals into AXB-REL8.

## Relay connections

The relay specification is 1 A @ VAC or VDC. FIG. 5 shows the relay wiring diagram for the AXB-REL8. The dotted lines are used to indicate commons. Install supplied tab strips to jumper between shared commons. Clip off excess tabs and bend strip up, away from other wiring.

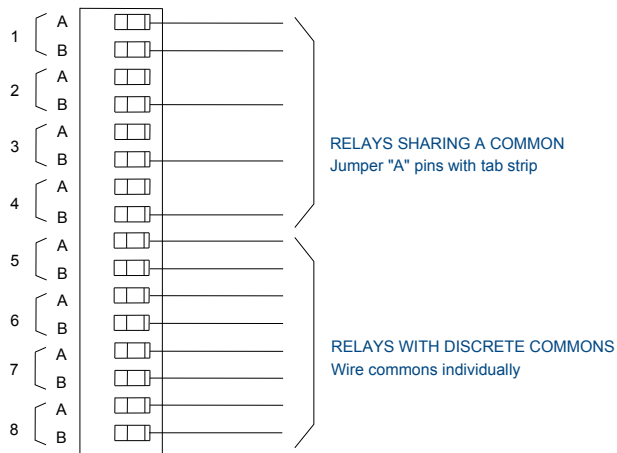


FIG. 5 Relay wiring diagram

## Testing The Installation

1. Check AxLink status LED - it should blink once per second (see Specifications table for AxLink status LED).
2. Relay LED lights, but source does not activate:
3. Check wiring continuity.
4. Check jumpers used for shared commons.
5. Check cable and source against supplied documentation.
6. Check operational status of interface or source.

## Rack-Mounting the AXB-REL8 (optional)

To rack-mount the AXB-REL8 into the optional AC-RK Accessory Rack Kit:

1. Remove any connected relay and AxLink connectors from the rear panel.
2. Remove the two screws on the front panel of the AXB-REL8.
3. Remove the front panel and the space bracket behind the panel.
4. Place the unit in the appropriate opening in the AC-RK.
5. Place the front panel of the AXB-REL8 on the front of the rack, over the unit.
6. Fasten the front panel to the rack and to the unit with the two screws you removed.

## System Worksheet

AXB-REL8

Dealer ID# \_\_\_\_\_

Dealer \_\_\_\_\_

 
PO# \_\_\_\_\_

Job \_\_\_\_\_

SO# \_\_\_\_\_

Description \_\_\_\_\_

Serial# \_\_\_\_\_



Device #	Wiring	Function	Color/Pin	AMX Cable/Infc #	Source
1	A				
	B				
2	A				
	B				
3	A				
	B				
4	A				
	B				
5	A				
	B				
6	A				
	B				
7	A				
	B				
8	A				
	B				

FIG. 6 AXB-REL8 System Worksheet

