 


Instruction Manual


Battery-Operated Mini-Fogger

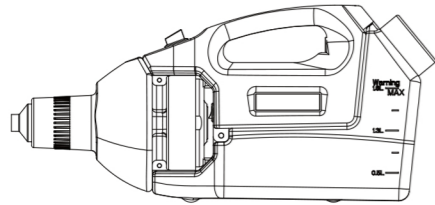

Please read this instruction manual carefully before using the device.

Warning: Do not use the machine while it's charging. Liquid cannot go past the warning line in the tank. Do no overflow.

I . Product Spare Parts Description

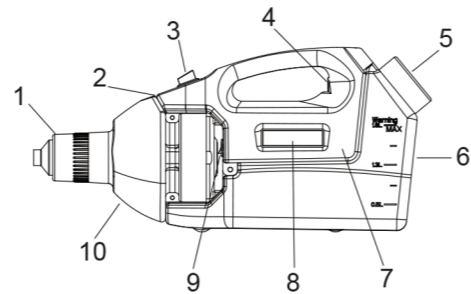

- | | | |
|----------------------|--------------------------|------------------|
| 1.Atomizer | 6.Tank | 11.Measuring cup |
| 2.Air pipe | 7.Battery | 12.Adapter |
| 3.Switch | 8.Power capacity display | 13.Nozzle |
| 4.Charging Connector | 9.Battery switch | |
| 5.Tank Cap | 10.Motor | |


II . Product Specifications and Technical Parameters

Battery-Operated Mini-Fogger


- Rated voltage : DC 24V
- Volume : 1.5L
- Rated power : 200W
- Spray volume : 25-350ml/min(adjustable)
- Droplet size : 35-60µm
- Spraying distances : 4-5M
- Battery : 24V
- Product size : 400.8*186*117.8mm

III . Instructions


1. Add the disinfectant liquid into the tank. After adding the disinfectant, tighten the tank cap. (Please note: Do not add more liquid than the maximum capacity of the water tank; otherwise, the liquid will flow into the battery and damage the machine.)
2. First, turn on the battery switch button and then the power switch button of the device. The device will then start to work. (Refer to picture below.)

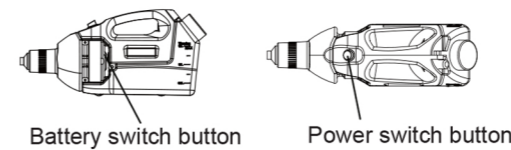

3. When there is a little bit of liquid left in the device, please do not tilt down the spray nozzle. Make sure the liquid does not accumulate in the front of the container, so the back pipette won't absorb the liquid.
4. Please note: Do not tilt the device excessively at any time, which can cause the liquid in the container to go past the warning line.

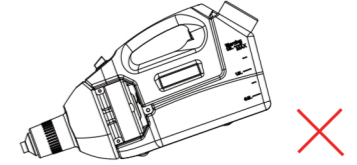

5. It is only suggested to tilt the device at an upward angle when the liquid is less than 0.5L.

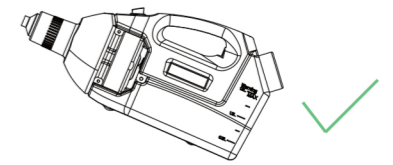

6. Battery Switch Button: When you recharge the battery, make sure the battery switch button is turned off; otherwise, it will not recharge.

7. Once the disinfectant liquid runs out, put some water into the tank and fog for 1-2 minutes to make sure that the disinfectant liquid does not block or corrode the nozzles and pipes.
8. Please turn off the battery switch after using the device every time.

IV. Battery Use and Maintenance

- 1.Charging Instructions: The battery charge indicator will appear red when the battery is charging. The indicator will turn green when the battery is fully charged.
- 2.Ideal charging environment: The device must be placed in a safe, dry, and normal temperature environment when charging. The device must also be turned off while charging to prevent the device from becoming unstable. The charging connector is located under the handle on the device. Keep charging until the indicator light turns green. The battery will take around 3 hours to fully charge.

V . Fault analysis and Solution

Reason	Solution
1. Fault phenomenon: the motor does not run.	
A.The battery power is low.	A.Please charge the device.

Reason	Solution
2. Fault phenomenon: the motor runs but does not spray.	
A.No liquid in tank. B.The tank cap is not tightened. C.The nozzle is blocked.	A.Add liquid. B.Check whether the cap is tightened. C.Remove the nozzle to clean.

VI. Attentions

1. Please fully charge the battery before using the device.
2. If water has entered the device, please wait for the device to dry completely before turning it on.
3. Please use the device at the ambient temperature between 0-40°C. Do not strike the device with heavy or sharp objects and prevent it from falling. Please use the special battery configured with this device. Do not use other types of batteries to avoid damaging the product.
4. Please turn off the battery switch when the device is charging.
5. Please keep the battery fully charged and recharge it every month if the device is not used for a long time.

6. Do not use highly corrosive liquids in the device. When using water-soluble chemicals, make sure the chemicals are dissolved completely before putting it in the device. Any liquid added to the tank must be free of impurities to prevent any clogging of the pipeline.
7. After a long-term use of the machine, please remove and clean the cotton filter, dry it and then put it back in the device for future use.
8. The warning line determines the maximum amount of liquid that can be added into the machine.
9. Please turn off the power immediately if one of the following situations occur:
 1. Water leaks into the device
 2. The pump system stops working suddenly
 3. The pump sound changes noticeably
 4. The tank leaks water
 5. The pump does not work, or other abnormal conditions
10. It is prohibited to use the device in the rain.
11. Do not use a wet hand to plug and unplug the battery and adapter. Keep the device away from a flammable, explosive and high-temperature environment.

VII. Warranty and After-Sales Service

1. All devices have 12 months of warranty starting the day of sale.
2. Maintenance Requirements: Invoice or other certifications which prove that the device was ordered from our company. The machine must be shipped back to company for repair.
3. If for any reason the fault of the machine not working is caused by human error or improper operation, the warranty is not valid.