

PTZ Camera with HDMI and USB Output AT-HDVS-CAM-HDMI-BK and AT-HDVS-CAM-HDMI-WH





The Atlona AT-HDVS-CAM-HDMI is an enterprise-grade PTZ camera designed for use in video conferencing and other applications such as lecture capture and distance education. It features an HDMI output, as well as a USB 2.0 interface for video and camera control. Simultaneous video output is available through two interfaces. Through USB, the HDVS-CAM-HDMI seamlessly integrates with the Omega™ Series for a complete, automated conferencing system that includes AV and USB extension. The HDMI output is ideal for use with a video conferencing codec, lecture capture appliance, or PC equipped for video capture. The HDVS-CAM-HDMI delivers high performance, professional-quality imaging with video resolutions up to 1080p @ 60 Hz over HDMI and 1080p @ 30 Hz for USB 2.0, as well as fast and accurate auto-focusing, and a fast yet quiet pan and tilt mechanism. This PTZ camera is ideal for a wide range of small to medium-sized meeting spaces, classrooms, training rooms, and many other environments. The HDVS-CAM-HDMI is available in black or white.

Package Contents

1 x AT-HDVS-CAM-HDMI-BK or AT-HDVS-CAM-HDMI-WH

1 x Wall mounting plate

1 x 1/4 20OUNC screws

1 x IR Remote Control

1 x USB A cable

1 x VISCA to RS-232 DB-9 adapter

2 x AAA battery

1 x Installation Guide



Panel Descriptions





1 RS-232

Connect included VISCA to RS-232 adapter here to control the camera with a third party software or hardware controller.

2 USB

Connect USB A cable from this port to the USB port of a conferencing system or USB extender such as AT-OME-EX-RX, AT-OME-SR21, etc.

B HDMI OUT

Connect to an HDMI device such as a video conference codec or PC.

4 LAN

Connect to a network switch to control the unit via TCP/IP or webGUI.

5 DC 12V

Connect the included 12V power supply to this port.

Mounting Instructions


The HDVS-CAM-HDMI has two installation options, wall mount (included) and ceiling mount (purchased separately).

Wall Mount installation

To install the HDVS-CAM-HDMI, 4 M6 swelling bolts, 1 1/4 20UNC bolt, 4 M6 nuts & shims, the included wall mount bracket, and the HDVS-CAM-HDMI are needed.

- 1 Install the M6 swelling bolts in a rectangular pattern on the wall, 100 mm wide and 50 mm high.
- 2 Attached the wall mount bracket onto the wall, by placing them on the M6 swelling bolts and securing it with the M6 nuts and shims.
- 3 Once the wall mount bracket is secure on the wall, place the camera on the top of the wall mount bracket and secure it with the 1/4 20UNC bolt.




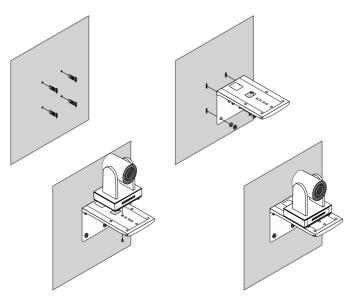

Ceiling Mount installation

To install the HDVS-CAM-HDMI, 4 PA3X30 self-tapping screws, 4 PM3X6 screws, 4 screw stoppers, 1 1/4 20UNC screw, the optional ceiling upper and lower covering plates, and the HDVS-CAM-HDMI are needed.


- 1 Install the 4 screw stoppers in the ceiling.
- 2 Connect the upper ceiling covering plate to the screw stoppers using the PA3X30 self-tapping screws.
- 3 Connect the lower ceiling covering plate to the bottom of the HDVS-CAM-HDMI using the 1/4 20UNC screw.
- 4 Mount the lower ceiling covering plate to the upper ceiling plate using 3 PM3X6 bolts.

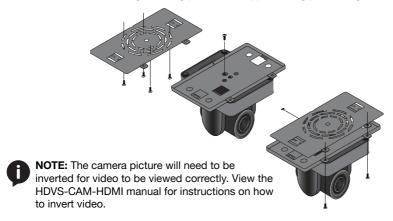




Installation

  - 1 *Optional* Connect the Ethernet cable to the LAN port on the back of the HDVS-CAM.
- 2 Connect the camera to the input of conferencing system, video conferencing codec, extender, PC or more.
 - a Connect the camera's USB port to the USB port of a conferencing system or USB extender such as AT-OME-EX-RX, AT-OME-SR21, etc.
 - b Connect the HDMI port to an HDMI device such as a video conference codec or PC.
- 3 *Optional* Connect the Visca to RS-232 cable to the Visca port for RS-232 control.





4 Connect the DC 12V power cable to the unit.

WebGUI

The HDVS-CAM-HDMI includes a built-in webGUI, which allows easy management and control of all features if not using the on-screen OSD and remote. Follow the instructions below to access the webGUI.

- 1 Use an IP scanner to determine the IP address of the HDVS-CAM-HDMI.
- 2 Launch a web browser and enter the IP address of the unit.
- 3 The HDVS-CAM-HDMI Login page will be displayed.
- 4 Enter the following information on the **Login** page.

User Name: admin Password: Atlona

5 Click the Login button.



IR Remote

The AT-HDVS-CAM comes with an IR remote control for full control of the camera and use of the OSD menu. See the user manual for full information on the remote buttons, OSD, and presets.



Installation Guide AT-HDVS-CAM-HDMI-BK and AT-HDVS-CAM-HDMI-WH

Troubleshooting

Problem	Cause	Solution
Why Can I not get any picture from my camera?		Remove the camera lens cover from the unit.
		 Try switching out the USB/ HDMI cables for new ones.
		 Bypass the extender to verify the unit isn't having compatibility issues.
		Check the device manager of the PC to ensure the camera USB/HDMI device is discovering correctly. If the device is discovered, ensure the camera is selected within the video recording program (e.g. Skype).
Why isn't my video showing correctly?	Resolution, focus, color, and/or refresh rate may be set incorrectly.	Use the one of the control interfaces (IR, RS-232, or webGUI) to adjust the resolution, focus the camera, switch between 50 and 60 Hz, and many other settings.
Why is my IR remote not working?	There is no power or too much sunlight.	 Ensure there are fresh batteries in the IR remote control. Move the camera, so the front panel IR window is out of direct light.



Installation Guide

AT-HDVS-CAM-HDMI-BK and AT-HDVS-CAM-HDMI-WH

	a Panduit company	AI-HDVS-CAM-HDMI-BK and AI-HDVS-CAM-HDMI-WF
Notes		



AT-HDVS-CAM-HDMI-BK and AT-HDVS-CAM-HDMI-WH



/ersion -



Toll free US International atlona.com • 877.536.3976 • 41.43.508.4321

© 2020 Atlona Inc. All rights reserved. "Atlona" and the Atlona logo are registered trademarks of Atlona Inc. All other brand names and trademarks or registered trademarks are the property of their respective owners. Pricing, specifications and availability subject to change without notice. Actual products, product images, and online product images may vary from images shown here.