


1. STOP

VERIFY ALL DIMENSIONS
TO ENSURE THAT THIS
PRINT IS 1 TO 1 SCALE.

2. MEASURE

3. CUT

Document p/n:
250-1202-001
Page 1 of 1

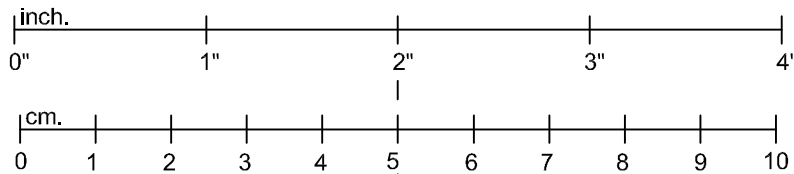


MEASURE WITH A RULER.

THIS IS A PRECISION CUT-OUT TEMPLATE.
DO NOT SCALE OR ADJUST!




CENTER MARK SHOWS POSITION
FOR DRYWALL ANCHOR INSTALLATION

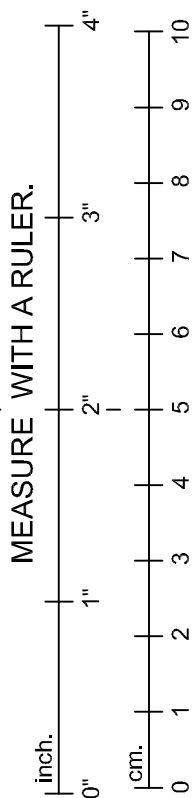

MEASURE WITH A RULER.

5.104"
[129.64]

1.530"
[38.86]

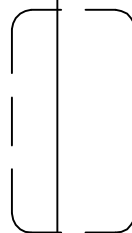

FOR REFERENCE ONLY
RETRACT OPENING POSITION

ALTINEX, INC. IS NOT RESPONSIBLE
FOR ANY DAMAGE TO WALL.

ALTINEX®

CENTER MARK SHOWS POSITION
FOR DRYWALL ANCHOR INSTALLATION



ALTINEX, INC. MODEL NUMBERS:
AC225-126W
AC225-126B
AC225-126I

1. STOP

2. MEASURE

3. CUT