


Sheet 1 of 1

INSTALLATION INSTRUCTIONS FOR AXIL X EDGE MOUNT

Install data jacks as described in the installation instructions provided with the data adapters, BE01421

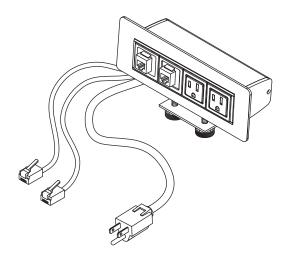

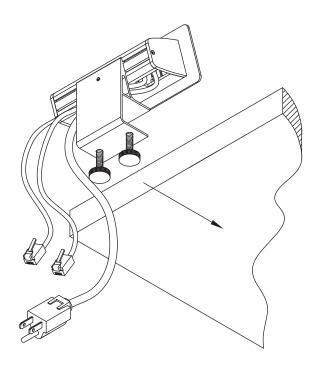

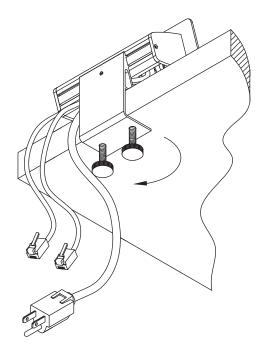

320 Byrne Industrial Dr., Rockford, Michigan 49341 Phone (616) 866-3461 Fax (616) 866-3449

www.byrne-electrical.com

© 2007 Byrne Electrical Specialists, Inc. All Rights Reserved.

09/02/09

IS02605