
## Installation


1. Secure the wall-mounted rack to the wall.

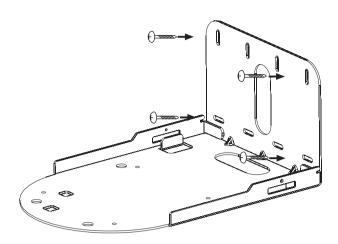


- 4. Connect the cable and power cord to the PTZ camera and place the
  - baffle board onto the stand.

Cable and power cord


2. Attach the PTZ camera to the tray with M3 screws.

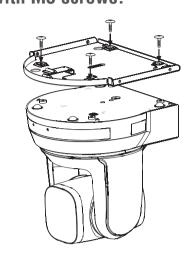

3. Slide the tray with the PTZ camera into the grooves of the L-shaped stand. Tighten the screws on both sides.

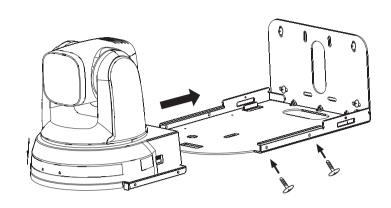

## **Finished Assembly**

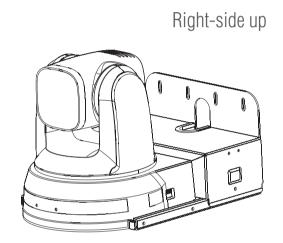



## **Dimensions**

