


1. STOP

VERIFY ALL DIMENSIONS
TO ENSURE THAT THIS
PRINT IS 1 TO 1 SCALE.

2. MEASURE

3. CUT

Document p/n:
250-0781-005
Page 1 of 8

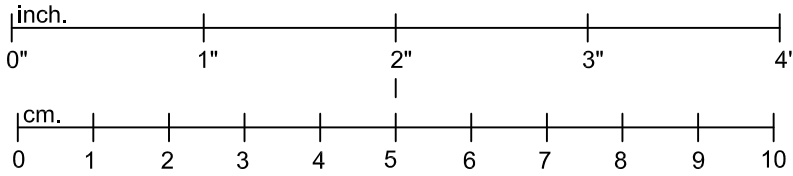


MEASURE WITH A RULER.

$\phi 5.250''$
[$\phi 133.35$]

.150" [3.81]
MAX. GAP
CLEARANCE

.050" [1.27]
MIN. GAP
CLEARANCE

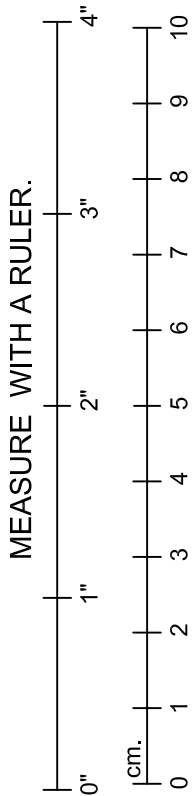

DO NOT DAMAGE OR THROW AWAY
THIS PORTION. THIS IS TOP COVER.

DO NOT SCALE OR ADJUST!

USE APPROPRIATE
ROUTE TOOL TO
ROUTE A GAP
NO GREATER THAN
.150" & NO LESS
THAN .05"


ALTINEX[®]
ALTINEX, INC. IS NOT RESPONSIBLE
FOR ANY DAMAGE TO A TABLE
OR DESK.

ALTINEX, INC.
MODEL NUMBERS:
PNP415

1. STOP



2. MEASURE

3. CUT

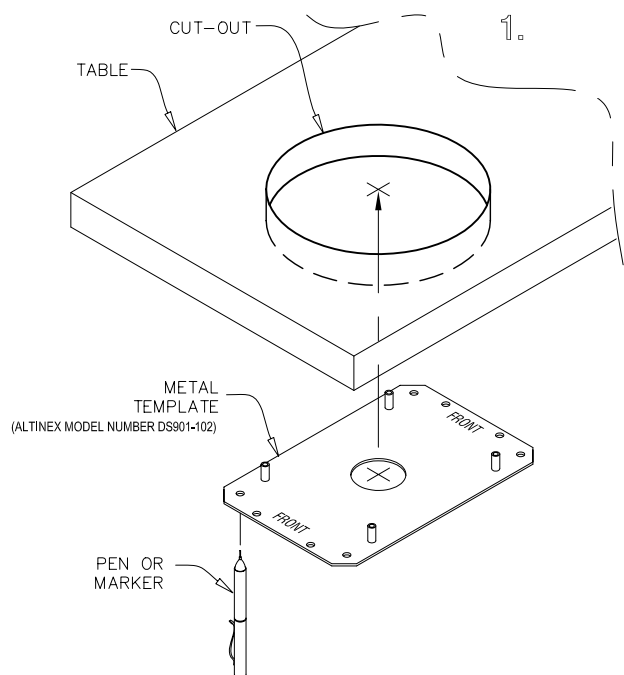


1. Once the initial cut-out has been made to the table, use metal template provided by Altinex to find the location of the pilot holes. Mark the location with a fine marker or pen.

2. Pre-drill pilot holes 8 times in the marked locations for a #6 wood screw:
softwood $\varnothing 1/16"$,
hardwood $\varnothing 5/64"$
The pilot holes should be around .375" inches deep.

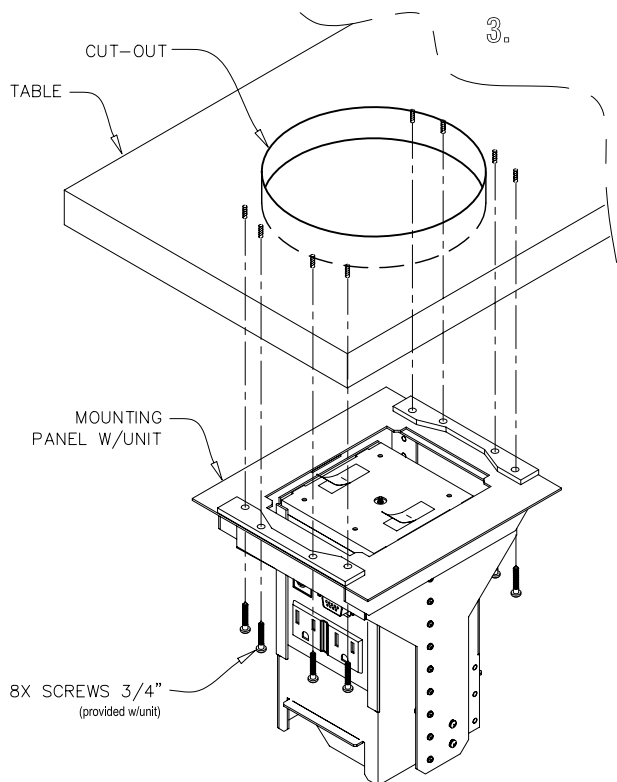
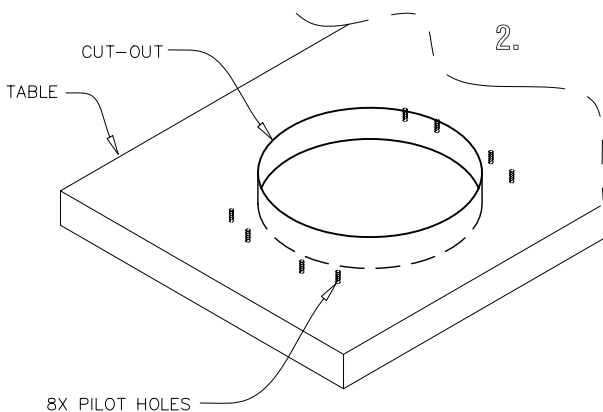


3. Secure the mounting panel with unit under the table using provided screws 3/4" long. Use screws as specified on labels in the plastic bags provided in the kit. The mounting screws that are provided with the unit should not be used on tables less than 3/4" thick.

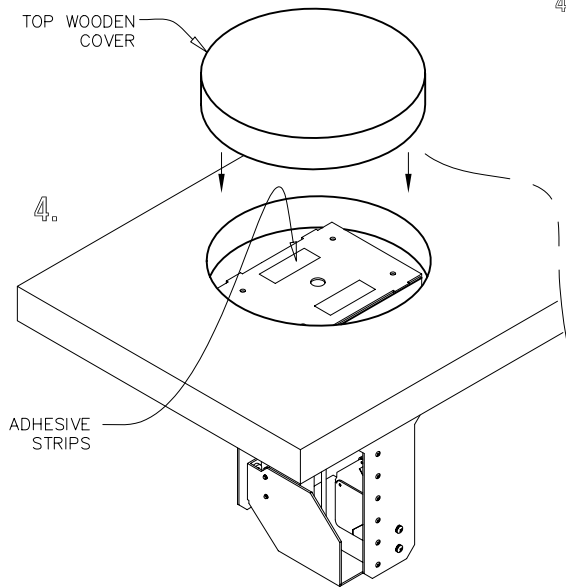

4. Close unit.
Remove top protection layer of both adhesive strips.
Place the wooden cover over the top cover with adhesive strips.

5. Align the wooden cover so that the space around the wooden cover is symmetrical. If the space is not equal from first try, peel the wooden cover off and try again, until it is aligned perfectly.

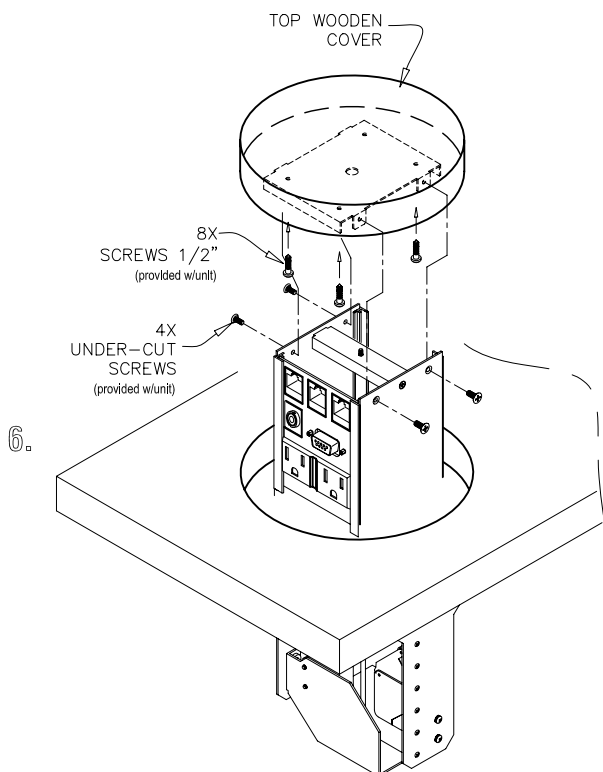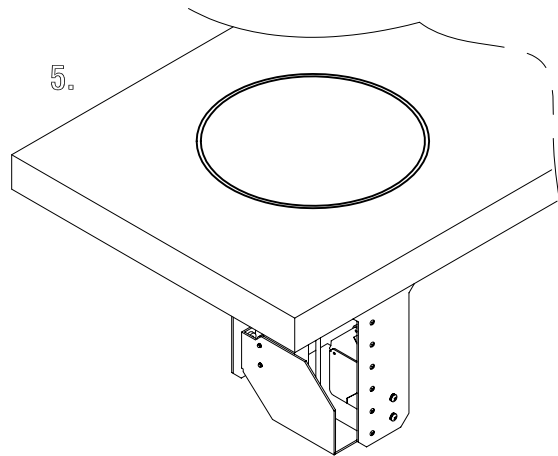


6. Once the wooden cover is aligned remove the 4 under cut screws that are mounted top cover plate, pick-up the wooden cover along with the top cover plate and mount both parts together. Pre-drill pilot holes 4 times in the hole locations for a #6 wood screw: softwood $\varnothing 1/16"$, hardwood $\varnothing 5/64"$. The pilot holes should be approx. $.375"$ deep. Use provided $1/2"$ screws to mount the wooden cover to the top cover panel. Then make sure the unit is up and secure the top cover to the unit using under-cut screws provided by Altinex.

THIS
ILLUSTRATION
IS NOT 1:1
SCALE

Document p/n:
250-0781-005
Page 3 of 8

ALTINEX®

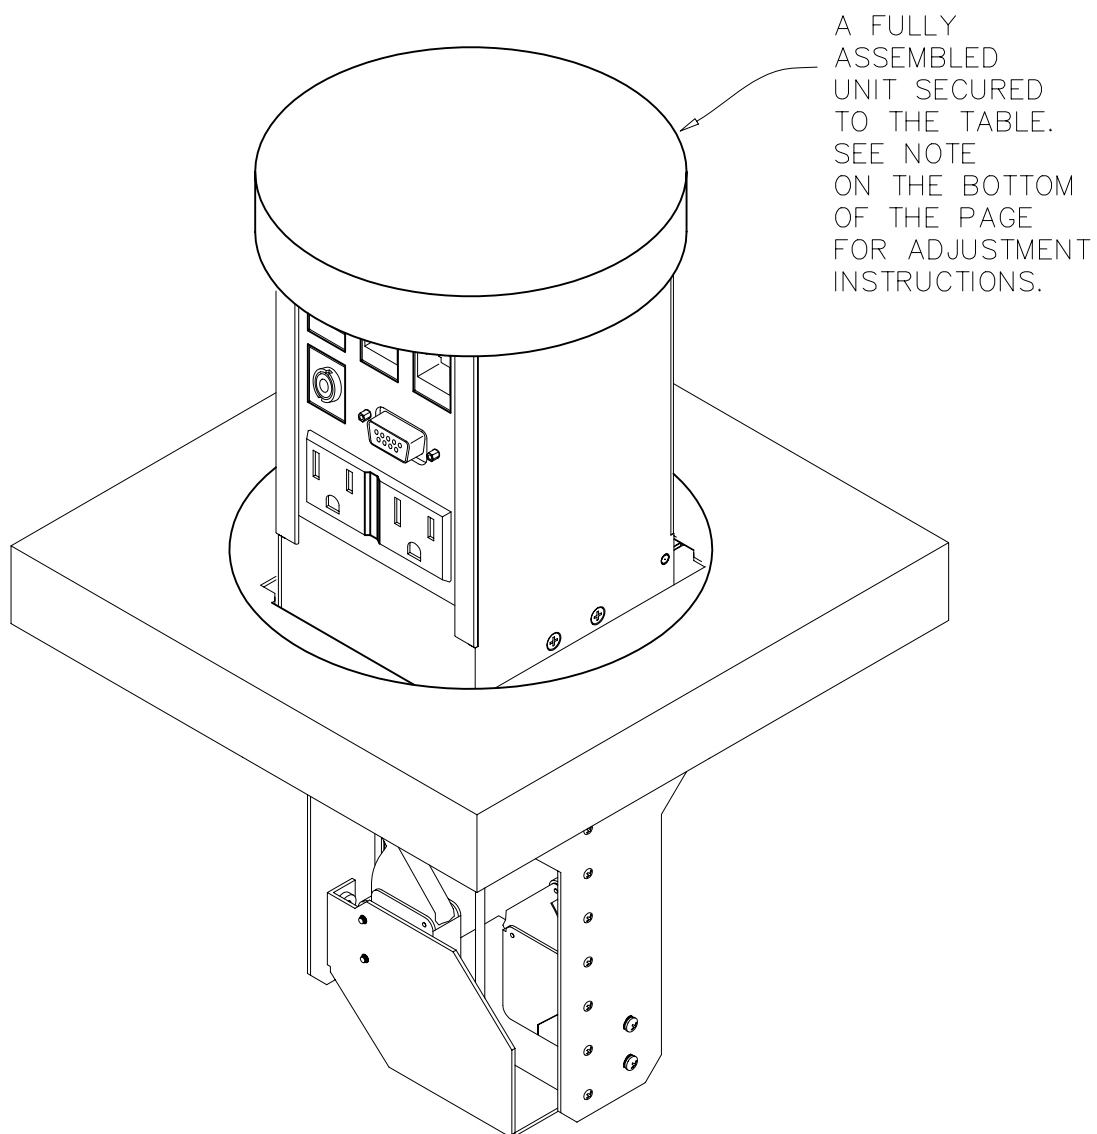

To adjust and align the unit to the surface of the table, simply:
1. Close the unit. 2. Loosen all four wing nuts under the table.
3. Press the unit down or upwards from below the desk until it
aligns with the surface of the desk. 4. And tighten the wing
nuts below the desk.


1. STOP

VERIFY ALL DIMENSIONS
TO ENSURE THAT THIS
PRINT IS 1 TO 1 SCALE.

2. MEASURE

3. CUT


Document p/n:
250-0781-005
Page 5 of 8

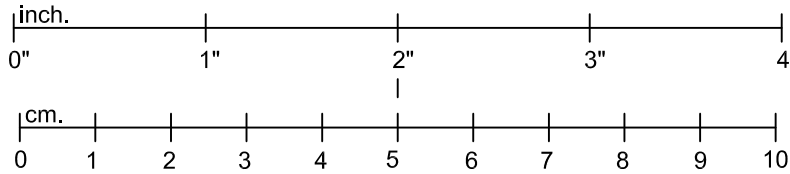



MEASURE WITH A RULER.

.100"
[2.54]

4X
R.500"
[R12.70]

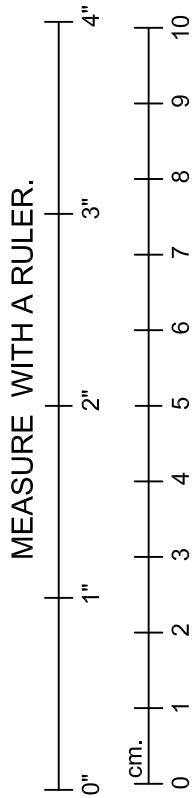

MEASURE WITH A RULER.

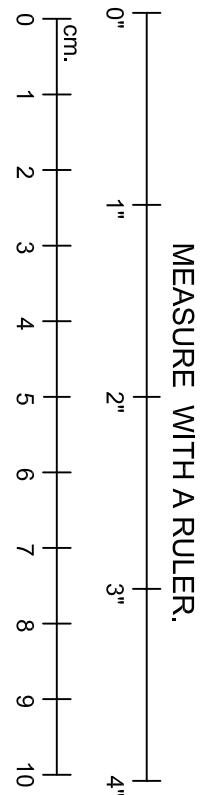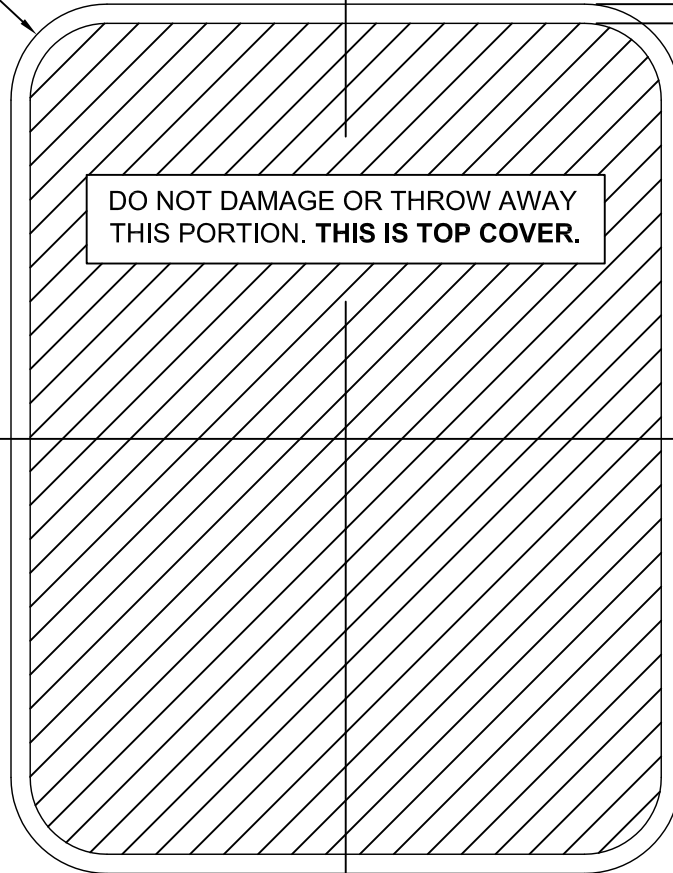

MEASURE WITH A RULER.

DO NOT SCALE OR ADJUST!


ALTINEX[®]
ALTINEX, INC. IS NOT RESPONSIBLE
FOR ANY DAMAGE TO A TABLE
OR DESK.

ALTINEX, INC.
MODEL NUMBERS:
PNP415

1. STOP



2. MEASURE

3. CUT

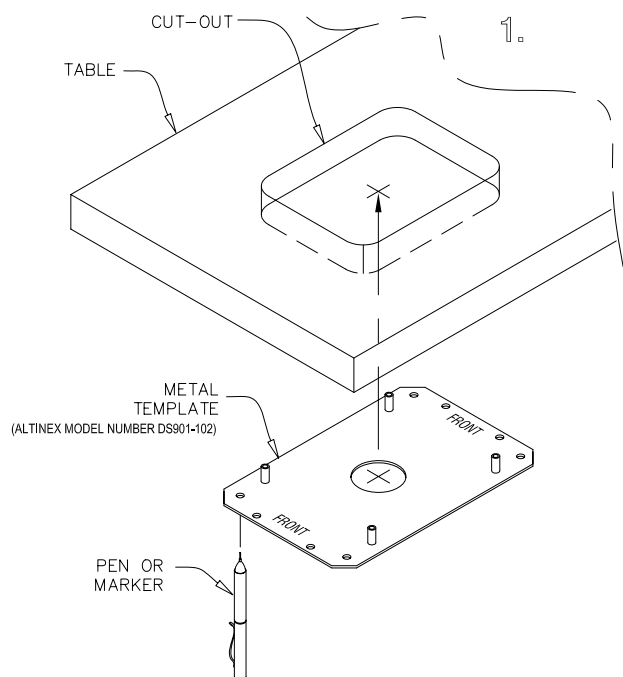


1. Once the initial cut-out has been made to the table, use metal template provided by Altinex to find the location of the pilot holes. Mark the location with a fine marker or pen.

2. Pre-drill pilot holes 8 times in the marked locations for a #6 wood screw:
softwood $\varnothing 1/16"$,
hardwood $\varnothing 5/64"$
The pilot holes should be around .375" inches deep.

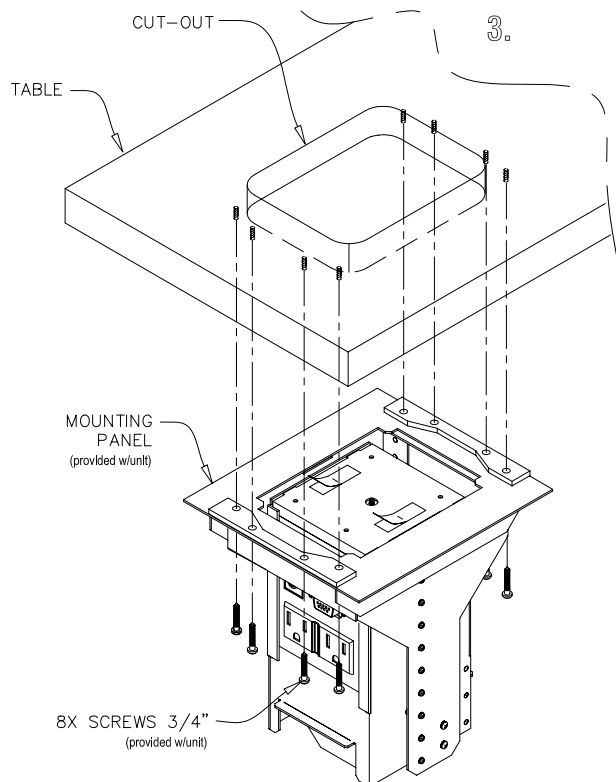
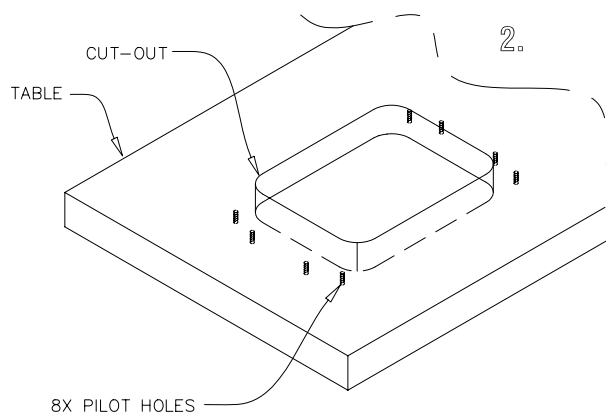


3. Secure the mounting panel with unit under the table using provided screws 3/4" long. Use screws as specified on labels in the plastic bags provided in the kit. The mounting screws that are provided with the unit should not be used on tables less than 3/4" thick.

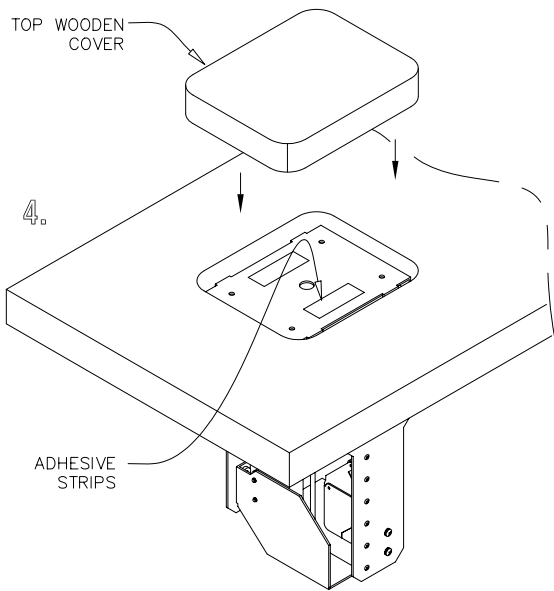

4. Close unit.
Remove top protection layer of both adhesive strips. Place the wooden cover over the top cover with adhesive strips.

5. Align the wooden cover so that the space around the wooden cover is symmetrical all around. If the space is not equal from first try, peel the wooden cover off and try again, until it is aligned perfectly.

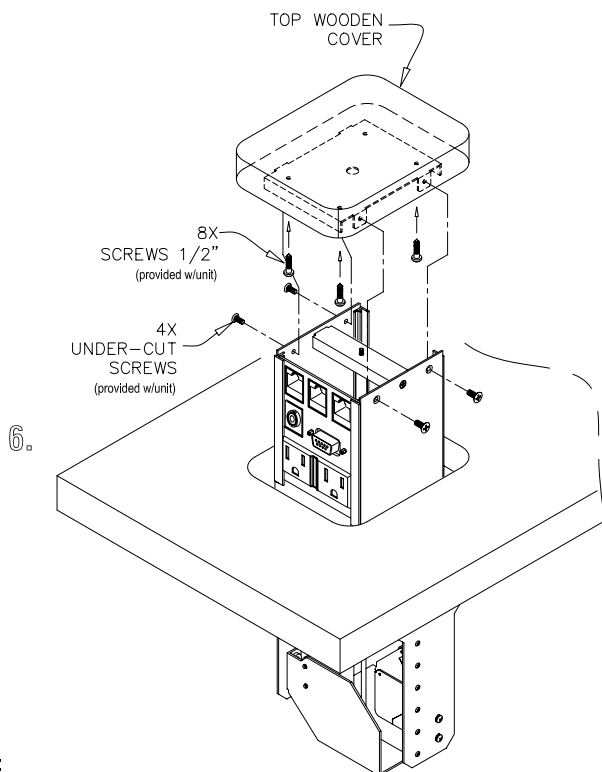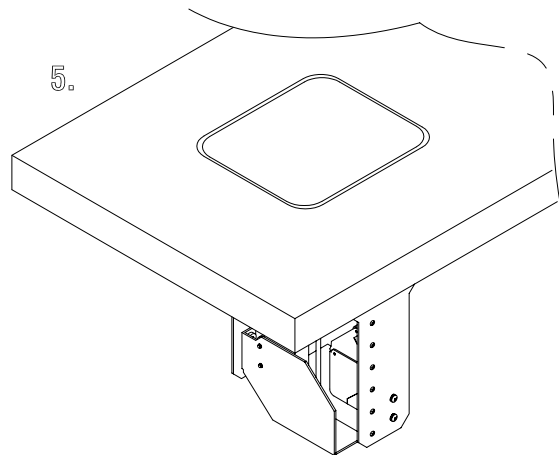


6. Once the wooden cover is aligned remove the 4 under cut screws that are mounted top cover plate, pick-up the wooden cover along with the top cover plate and mount both parts together. Pre-drill pilot holes 4 times in the hole locations for a #6 wood screw: softwood $\text{Ø}1/16"$, hardwood $\text{Ø}5/64"$. The pilot holes should be approx. $.375"$ deep. Use provided $1/2"$ screws to mount the wooden cover to the top cover panel. Then make sure the unit is up and secure the top cover to the unit using under-cut screws provided by Altinex.

THIS
ILLUSTRATION
IS NOT 1:1
SCALE

Document p/n:
250-0781-005
Page 7 of 8

ALTINEX[®]
ALTINEX, INC. IS NOT RESPONSIBLE
FOR ANY DAMAGE TO A TABLE
OR DESK.

THIS
ILLUSTRATION
IS NOT 1:1
SCALE

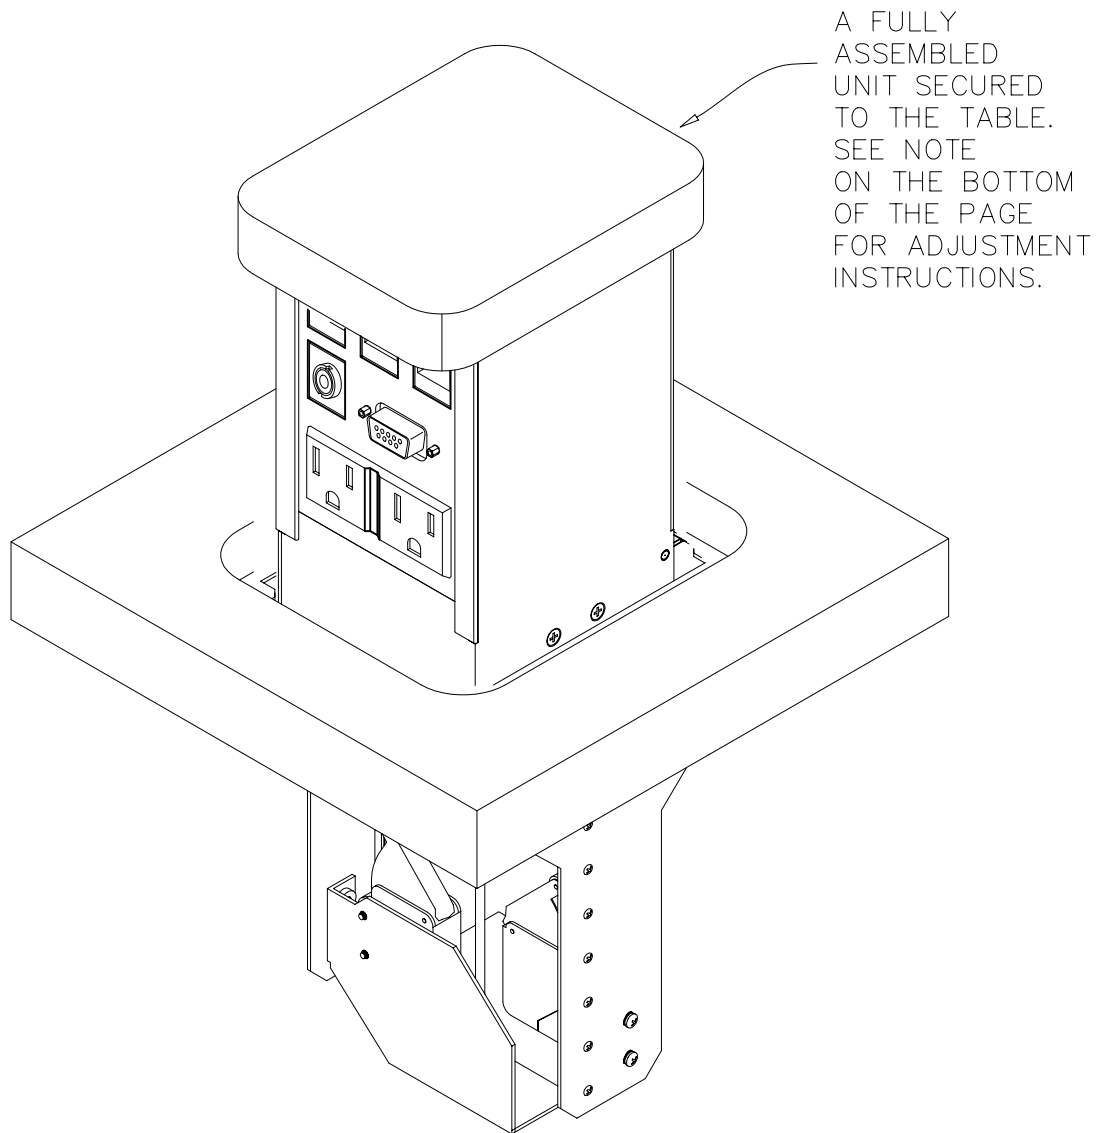

To adjust and align the unit to the surface of the table:

- 1. Close the unit. 2. Loosen all four wing nuts under the table.*
- 3. Press the unit down or upwards from below the desk until it aligns with the surface of the desk. 4. And tighten the wing nuts under the table.*

Document p/n:
250-0781-005
Page 8 of 8

ALTINEX[®]
ALTINEX, INC. IS NOT RESPONSIBLE
FOR ANY DAMAGE TO A TABLE
OR DESK.